

Table of Contents

Table of Contents	Page 1
Information & Model Definitions.....	Page 2
Safety Details	Page 3
Safeguards	page 4 & 5
Unpacking Instructions for CB/PB	Page 6
Assembly Instructions for CB/PB.....	Page 7
Unpacking Instructions for TT.....	Page 8
Unpacking Instructions for I/IM.....	Page 9
Assembly Instructions for I/IM	Page 10 &11
Operating Instructions	Page 12
Cleaning & Service	Page 13 & 14
Warranty	Page 15
Grill Labels.....	Page 16
Notes	Page 17
Company Information	Page 18

If you have any questions about the assembly or operation of your Electri-Chef® Model 4400-EC-336 Grill, please contact Electri-Chef® Customer Service at

1-800-442-7207

Email: info@electri-chef.com

Fax: 254-938-7055

Electri-Chef® Grills

P.O. Box 1026
Temple, TX 76503



1.0 Safety Details



WARNING

- THIS OWNERS MANUAL SHOULD BE READ COMPLETELY BEFORE ATTEMPTING TO USE OR SERVICE THE ELECTRI-CHEF® MODEL 4400-EC-336 GRILL. FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.

It is important to note that some vital statements throughout this manual and on the decals affixed to the Electri-Chef® Model 4400-EC-336 Grill are preceded by bars containing the words DANGER, WARNING, CAUTION, or NOTE. For your protection we recommend you take special notice of these safety procedures. Safety procedures are essential and must be followed.

If any of the labels on the grill become damaged, have been removed or cannot be easily read, they should be replaced immediately to avoid possible property damage, personal injury, or death. Contact your Electri-Chef® distributor, dealer or Electri-Chef® Service Center.



DANGER

- A DANGER INDICATES AN IMMEDIATE HAZARD WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



WARNING

- A WARNING INDICATES AN IMMEDIATE HAZARD WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



CAUTION

- A CAUTION INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN PRODUCT OR PROPERTY DAMAGE OR MINOR PERSONAL INJURY.



NOTE

- A NOTE PROVIDES KEY INFORMATION TO MAKE PROCEDURES MORE EASILY UNDERSTOOD.

The safety procedures listed must be followed whenever the Electri-Chef® 4400-EC-336 Grill is being operated, repaired, or serviced. Specific warnings appear throughout this manual and on the Electri-Chef® 4400-EC-336 Grill

Grill Labels

CAUTION - FOR YOUR SAFETY

To ensure continued protection against risk of electric shock, connect to properly grounded outlets only. Disconnect from electric outlet before cleaning or any service work is done on unit

 
OPERATING INSTRUCTIONS

- Clean drip trays before each use
- Read owners manual before
- Turn timer past 10
- Select grilling temperature
- Set timer to desired time
- When grilling is complete turn temperature control to "0" and allow timer to time out automatically

ATTENTION

Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas, avant d'enlever ou d'installer des pièces et avant de le nettoyer.

Les appareils à cordon qui doivent (être mis à la terre) par le cordon et la fiche, conformément à l'article 27.6.1, doivent porter le marquage suivant, ou l'équivalent, à un endroit bien en vue: [ATTENTION. Pour ne pas compromettre la protection contre les risques de choc électrique, ne brancher qu'à une prise correctement mise à la terre.]

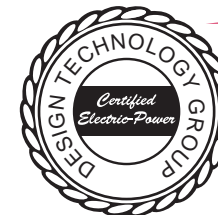

Electri-Chef®

FLAMELESS ELECTRIC GRILLS

P.O. Box 1026
Temple, TX 76503

MODEL
4400 EC
336

208/220 Volts at 20 AMP/4400 Watts
Outdoor Use Only



7.0 Warranty

LIMITED LIFETIME, 5, 3 AND 1 YEAR WARRANTY

THE STAINLESS STEEL GRILL ASSEMBLIES OF THIS PRODUCT ARE WARRANTED FOR THE LIFETIME OF THE ORIGINAL CONSUMER PURCHASER FROM THE DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THE COOKING GRID IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR FIVE (5) YEARS FROM DATE OF PURCHASE AGAINST BURN-OUT OR DEFECTS IN MATERIALS AND WORKMANSHIP.

THE STAINLESS STEEL HEAT - FLAVOR PLATE IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR THREE (3) YEARS FROM DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

ALL OTHER COMPONENTS, ELECTRICAL OR MECHANICAL ARE WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR A MINIMUM OF ONE (1) YEAR FROM THE DATE OF PURCHASE OR THE WARRANTY TIME OF THE MANUFACTURE OF THE COMPONENT, ELECTRICAL OR MECHANICAL, WHICH EVER WARRANTY TIME PERIOD IS LONGER, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THIS WARRANTY DOES NOT COVER DAMAGE OR FAILURES CAUSED BY MISUSE, UNCONTROLLED FLARE-UPS, NEGLIGENT OR COMMERCIAL USE. IF ANY WARRANTED PART FAILS DURING ITS WARRANTY PERIOD, SEND THE FAILED OR DEFECTIVE PART(S) TO ELECTRI-CHEF GRILLS FOR REPAIR OR REPLACEMENT AT THE MANUFACTURER'S OPTION WITHOUT CHARGE. THE TRANSPORTATION COST FOR RETURNING FAILED OR DEFECTIVE COMPONENTS ARE THE RESPONSIBILITY OF THE CONSUMER.

REPAIR OR REPLACEMENT OF A DEFECTIVE COMPONENT(S) IS THE SOLE REMEDY UNDER THIS LIMITED WARRANTY. IN NO EVENT WILL ELECTRI-CHEF BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. ANY IMPLIED WARRANTY OF THIS PRODUCT SHALL BE LIMITED IN DURATION TO ONE (1) YEAR DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF IMPLIED WARRANTY, SO THIS LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Electri-Chef® Grills

P.O. Box 1026
Temple, TX 76503

1.1 Important Safeguards

READ and SAVE THESE INSTRUCTIONS

Do not touch hot surfaces. Use handles or knobs.

To protect against electrical shock do not immerse cord or plugs in water or other liquids.

This appliance should not be used by children.

Unplug from outlet before cleaning. Allow to cool before servicing.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not use appliance for other than its intended use.

Fuel, such as charcoal briquettes, is not to be used with appliances.

Use only on properly grounded outlet.

Servicing of this appliance should be performed by an authorized service representative.

Do Not Use extension cord.

Clean Drip Tray before each use.

READ and SAVE THESE INSTRUCTIONS

1.1 Importantes Mesures de Securite

Appliquez les mesures de securite elementaires suivantes lor vous utilisez un appareil electrique:

- a) Lisez toutes les instructions.
- b) Ne touchez pas les surfaces qui peuvent etre chaudes. Utilisez les poignees ou les boutons.
- c) Pour eviter les chocs electriques, ne plongez pas le cordon, la fiche ou liap pareil portatif (indiuer au besoin diautres pieces similaires) dans lieau ou autre liquide.
- d) Surveillez bien les enfants siils utilisent un appareil ou siils se trouvent a proximite d'un appareil en marche.
- e) (i) Appareils portatifs. Debranchez l'appareil de la prise de courant quand vous ne l'utilisez pas, avant d'enlever ou d'installer des pieces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.
(ii) Appareils branches a demeuer. Assurez-vous que l'appareil est ARRETE quand vous ne l'utilisez pas, avant d'eniever ou d'installer des pieces et avant de le nettoyer.
- f) Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommanges, si l'appareil ne fonctionne pas correctement, s'il est tombe ou s'il a ete tombe ou s'il a ete endommage. confiez au service de reparation recommande le plus proche tout examen, reparation ou reglage electrique ou mecanique de l'appareil.
- g) L'utilisation d'accessories non recommandes par le fabricant de l'appareil peut causer des blessures.
- h) N'utilisez pas l'appareil a exterior (cette consigne peut etre omise si le produit est destine a etre utilise a l'exterior.
- i) Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des sur faces chaudes.
- j) Ne placez pas l'appareil pres d'un bruleur a gaz allume ou d'un element electrique ou tension ou dans un four allume.
- k) Sovez tes prudent en deplacant un appareil qui contient de l'huile ou un autre liquide chaud.
- l) Le cas echeant branchez toujours la fiche a l'appareil et assurez-vous que l'interruptuer de celui-ci est a la position ARRET (OFF) avant de brancher lafiche dans la prise. Pour de brancher l'appareil, placez l'interrupteur a ARRET (OFF) puis retirez la fiche de la prise de courant.
- m) N'utilisez l'appareil que pour la fonction a laquelle il est destine.
- n) Evitez de troucher les pieces mobiles.
- o) Conservez ces instructions.

6.0 Caring for the Exterior of Your Stainless Electri-Chef® Grill Continued



DANGER

NEVER ATTEMPT TO SERVICE OR REPAIR YOUR GRILL WHILE PLUGGED INTO THE ELECTRIC OUTLET.



WARNING

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.

Cleaning Exterior

Regular Cleaning...

- Wash down the surface regularly using water containing soap or mild detergents.
- Always rinse the surface with fresh water after cleaning.
- Polishing the surface with a soft dry cloth can complete a thorough cleaning operation.
- When wiping or polishing stainless steel, always follow the direction of the original grain or "brush" finish.

Cleaning Aids...

- Never use abrasive materials such as scouring pads or wire wool.
- Use a brush or soft damp cloth to remove loose deposits.
- Use a cream cleanser and soft cloth for stubborn deposits.

All grades of stainless steel can stain and discolor as a result of long term surface deposits and can never be accepted as completely maintenance free. In order to achieve maximum corrosion resistance, the surface of the stainless steel must be kept clean. Surface contamination and the formation of deposits must be prevented. These deposits may be minute particles of iron or rust from other sources used on the building or new premises and not removed until after the stainless steel items have been fixed. Industrial and even naturally occurring atmospheric conditions can produce deposits which can be equally corrosive, e.g. salt deposits from marine conditions. Strong acid solutions are sometimes used to clean masonry and tiling of buildings but these should NEVER be permitted to come into contact with metals, including stainless steel.

**For additional information, please contact
Electri-Chef® by calling (800) 442-7207
or via e-mail at info@electri-chef.com**

6.0 Cleaning, Service & Maintenance of Your Electri-Chef® Model 4400-EC-336 Grill



NOTE

Do not use high intense heat to clean grid. Using high intense heat for cleaning only bakes grease and food to grid and wastes electricity. This practice may result in a grease fire which may cause damage to the grill and its electronic components.



WARNING

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.



NOTE

It is recommended to use rubber or plastic gloves during cleaning of grill.



CAUTION

NEVER USE any abrasive cleanser, wire brush, metal scouring pads or any other abrasives on the stainless steel surfaces of the grill.

Cleaning Interior

- A. Disconnect grill from electric outlet.
- B. Remove Grease Drip Tray and dispose of drip tray liner if required.
Replace with heavy duty aluminum foil if a disposable liner is not available.
- C. Use a spray oven-cleaner ("Easy-Off Fume Free Max" is recommended) and **FOLLOW THE DIRECTIONS ON THE CAN** for two hour cleaning. Disregard the "BBQ Grill Cleaning" warning statement about grill surfaces located on the can. Your all stainless steel interior and exterior surfaces of your grill WILL NOT be damaged from the use of the Easy-Off oven cleaner.
- D. After cleaning, wipe grill dry and reconnect to the electric outlet.
- F. Cleaning of Cooking Grid.
 1. Follow "BBQ Grill Cleaning" on back of Easy-Off can. After completion replace cooking grid.
- G. Cleaning of Stainless Steel Heat Plate.
 1. Remove cooking grid from grill. Remove stainless steel Heat Plate from grill and scrape excess burnt food and grease onto paper or into plastic bag for disposal. Replace Heat Plate and Cooking Grids.

Service & Maintenance

There is very little service or maintenance required except for cleaning.

If you encounter any operational problems with your Electri-Chef® Grill, unplug the grill from the electric outlet and call your dealer where you purchased the grill or call

Electri-Chef® Grills customer service department during normal business hours.

Call 1-800-442-7207 or Email: info@electri-chef.com

2.0 Unpacking Instructions for CB & PB

This section describes how to unpack your Electri-Chef® Model 4400-EC-336 Grill

Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

A. Items in carton (ALL)

1. Grill body, base with collapsable shelves
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) cooking grids.
5. Laminated Cook Like a Pro instructions.

Additional items included for specific grill models:

A1. Items in carton (CB)

6. Four (4) swivel casters (or 4 adjustable legs if leg option ordered).

A2. Items in carton (PB)

6. Anchoring kit.

2.1 Assembly Instructions for CB & PB Continued

This section describes how to assemble your Electri-Chef® Model 4400-EC-336 Grill

NOTE

1. CB (Closed Base)

No grill assembly is required for the Model 4400-EC-336-CB.
The grill comes fully assembled and ready to use.

2. PB (Pedestal Base)

No grill assembly is required for the Model 4400-EC-336-PB.
The grill comes fully assembled.

**REQUIRED BEFORE USE:
Anchoring Pedestal**

 
For additional information, please contact
Electri-Chef® by calling (800) 442-7207
or via e-mail at info@electri-chef.com

5.0 Operating Instructions

Your grill has now been unpacked and assembled. It is now time to plug your grill into a 220 Volts Single Phase 16 amp outlet.

WARNING

Plug this unit into a properly grounded 220 Volt - Single Phase - 20 AMPS outlet.

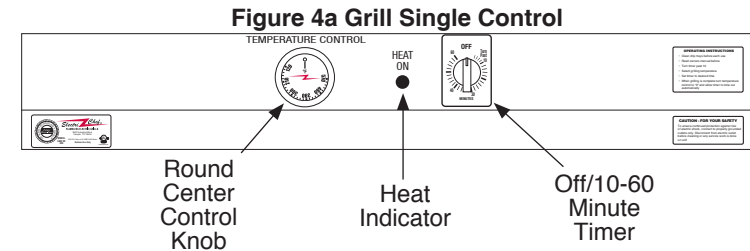

Follow the instructions on the control panel of your grill and other suggestions in this section to operate your Electri-Chef® Model 4400-EC-336 Grill.

Your Single control grill in Figure 4a, consist of one (1) Round Temperature Control Knob and one (1) OFF/10-60 Minute Timer and one (1) Heat Indicator.

- The Round Temperature Control Knob controls the grill temperature through a range of 0 (OFF) 120° - 570°

Preheat grill 10 - 12 minutes at desired temperature control setting before grilling.

OPERATING INSTRUCTIONS

1. Read owners manual before operating this grill
2. Plug into 220 Volts @ 16 amp outlet
3. Set timer to desired time
4. Select grilling temperature
5. When grilling is complete turn temperature control to "0" and allow timer to time off automatically

General notes for above

1. Always check grease trays for excess grease or food particles before each use. If required, remove excess grease or food.
2. It is recommended that all grilling, cooking or baking be accomplished with the grill hood in the closed position.
3. At the completion of any grilling, cooking or baking, do the following:
 - A. Turn round temperature control knob to zero (0). (OFF)
 - B. Allow timer to time out. Do not force to zero (0). (OFF)
 - C. Clean cooking grid with soft wire brush of any excess greas and food particles.

NOTE

Allow the timer to time out on its own. Components may be damaged by forcing timer to "0". (OFF)

4.2 Assembly Instructions for Island Model (continued)

Step 3.2



Attaching the Lower Grill Flange to Island Grill

Island Lower Grill Flange

Notes

1. The Lower Grill Flange is attached to the power cord. There is no way of removing the Lower Grill Flange without damaging it or the power cord.
2. Attach the Lower Grill Flange to the Island Grill as shown in diagram 1.a with a phillips screwdriver, using the screws in the enclosed bag labeled Lower Grill Flange Mounting Screws.

  Diagram 1.a

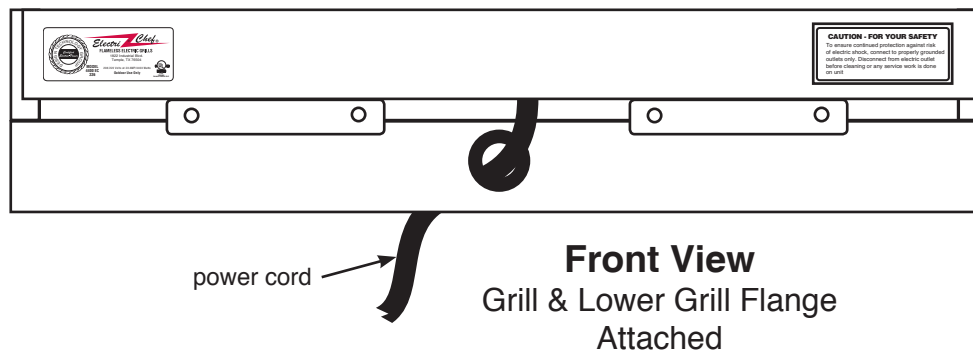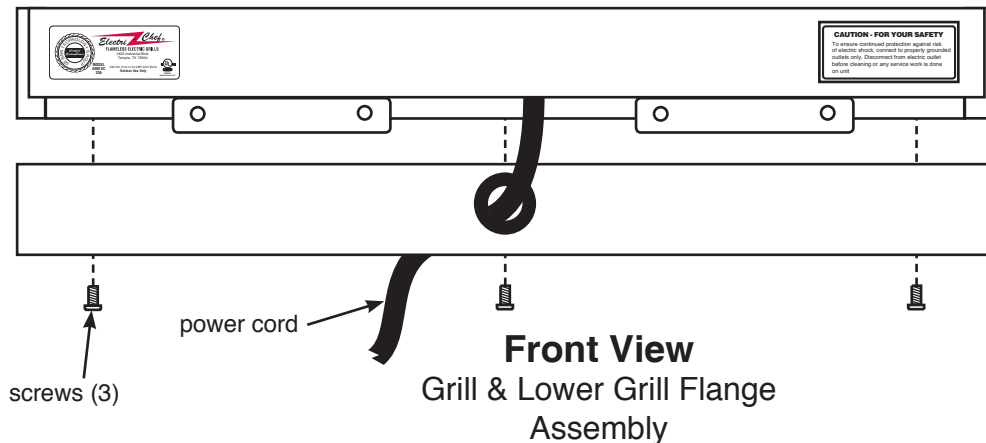

3.0 Unpacking & Assembly for TT Models

This section describes how to unpack your Electri-Chef® Model 4400-EC-336-TT Grill

Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

Step 2 - Assembly

- E. Remove grill from carton bottom.
- F. Attach legs (4) on each corner of the grill body.

Step 3

- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

A. Items in carton

1. Grill body
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) legs.
5. Four (4) cooking grids.

**No grill assembly is required for the
Model 4400-EC-336-TT.**

The grill comes fully assembled.

**REQUIRED BEFORE USE:
Attaching adjustable legs**

4.0 Unpacking Instructions for 336-I, 336-IM & 336-JA/CT

This section describes how to unpack your Electri-Chef® Model 4400-EC-336 Grill

Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

Step 3.1 Assembly

- J. See Island Cut-Out Information Page (see page 10)

Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

A. Items in carton

1. Grill body
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) cooking grids.
5. Three (3) Lower Grill Flange Mounting Screws

No grill assembly is required for the Model 4400-EC-336-I or IM. The grill comes fully assembled. Mounting in Island Kitchen is required before use.

4.1 Assembly Instructions for Island Model (continued)



 
CAUTION

Island enclosures must be built of fire resistant materials.

Step 3.1

Place grill in island cut-out

Island Cut-Out

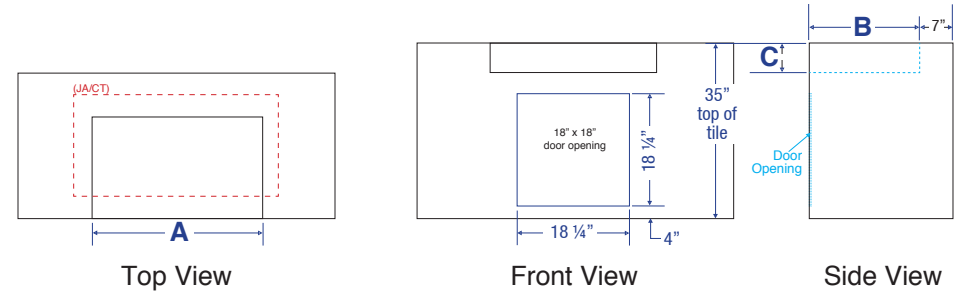

Notes

1. No under grill support required on the island.
2. Grill has mounting flanges on sides & back which sit on top of island surface, tile, etc.
3. Grill cut-out should be:

Island Model 224-I

- A. 16 1/4" left to right
- B. 16 1/4" front to back
- C. 7 3/4" from top of island surface

Island Model 224-IM

- A. 16 5/8" left to right
- B. 16 7/8" front to back
- C. 7 3/4" from top of island surface

Island Model 336-I

- A. 24 1/4" left to right
- B. 16 1/4" front to back
- C. 7 3/4" from top of island surface

Island Model 336-IM

- A. 25 5/8" left to right
- B. 16 7/8" front to back
- C. 7 3/4" from top of island surface

Model 336-JA/CT

- A. 29" left to right
- B. 21" front to back

4. Be sure 220 Volt @16 amp outlet is located behind island.
5. Island should be constructed of fire resistant materials or grill cut-out should be lined with 1/2" thick fire resistant materials.
6. Continue to 4.2 Assembly Instructions to attach Lower Grill Flange.